

Orzly Controller Update Operating Instruction for Nintendo Switch Version 5.0.0

Requirements: Windows 7 or higher and a computer/laptop with a USB port.


Upgrading Process:

1. Download driver from: http://orzly.tech/GamePad_Update-Program
2. Unzip the folder;
3. Run the update program
"2018-1-23_ZXD1070_Pro_Switch_C096_0x45B4_ver_11" (see Picture-1);
4. Hold down the left analogue stick and plug the controller USB into the computer (see Picture-2);
5. Wait for the controller to be recognised by the computer;
6. Once the controller is recognised, the "Update Firmware" button turns from grey to black (see Picture-3);
7. Click "Update Firmware" (see Picture-3);
8. After the update is successful, the message "Update Success!" will appear. (see Picture-4).


NOTE: You need to keep the left analogue stick pressed until the computer recognises the controller and begins to install the driver.



Picture-1

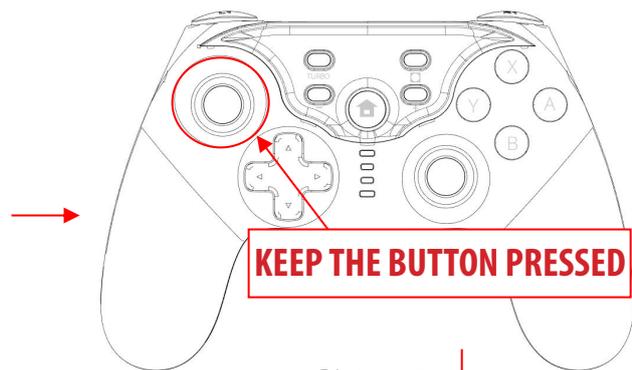

Picture-2

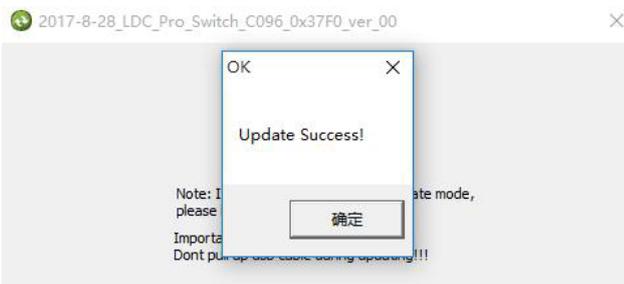

Picture-4



Picture-3